

Wet Lime Spreader (WLS) Rate Chart:

Use the following chart for initial spreader settings:

WLS 24 inch chain 540 PTO 40 ft spread width								
Gate Opening	LIME (100 lb/cf)							
	LOW Range			<Speed>	HIGH Range			
	5 mph	7.5	10 mph		5 mph	7.5		10
10"	4300	2860	2150		7030	4690	3520	
9"	3870	2580	1930		6330	4220	3160	
8"	3440	2290	1720		5620	3750	2810	
7"	3010	2010	1500		4920	3280	2460	
6"	2580	1720	1290		4220	2810	2110	
5"	2150	1430	1070		3520	2340	1760	

	FERTILIZER (65 lb/cf)					
	LOW Range			LOW / LOW		
5"	1400	930	700	810	540	410
4"	1120	750	560	650	430	330
3"	840	560	420	490	330	240
2"	560	370	280	330	220	160
1"	280	190	140	160	110	80

Stoltzfus Spreaders Morgantown, PA 19543 Table for reference only.

Changing Gear Ranges:

Gear ranges are selected by moving the roller chains between the different sets of sprockets:

Low Range: Inside set on drive shaft, outside set on gearbox input

High Range: Inside set on drive shaft,
inside set on gearbox input



Low/Low Range, if installed: Outside set on drive shaft, outside set on gearbox input